

FINE4037 LED PIXIE Channel Map:

以下为灯具实际运行特性表。

FINE4037 LED PIXIE 特性表							
Specific	English	Std	RBG	RGBW	SHAP	Value	Function
红色	Red	1	1	1	1	0-→255	红色粗调
红色微调	Red fine	2	2	2	2	0-→255	红色微调
绿色	Green	3	3	3	3	0-→255	绿色粗调
绿色微调	Green fine	4	4	4	4	0-→255	绿色微调
蓝色	Blue	5	5	5	5	0-→255	蓝色粗调
蓝色微调	Blue fine	6	6	6	6	0-→255	蓝色微调
白色	White	7	7	7	7	0-→255	白色粗调
白色微调	White fine	8	8	8	8	0-→255	白色微调
色温	CT0	9	9	9	9	0-→3	无功能
						4	色温 2700K
						5	色温 3200K
						6	色温 4300K
						7	色温 5600K
						8	色温 6500K
						9	色温 8000K
						10-→255	色温从 8000K 调至 2700K
颜色宏	Macro Colour	10	10	10	10	0-→9	无功能
						10-→255	颜色宏效果
频闪	Strobe	11	11	11	11	0-→3	CLOSED
						4-→103	脉冲频闪由慢到快, 1Hz-25Hz
						104-→107	OPEN
						108-→207	等均频闪由慢到快, 1Hz-25Hz
						208-→212	OPEN
						213-→251	随机频闪由慢到快
						252-→255	OPEN
调光	Dimmer	12	12	12	12	0-→255	调光粗调
调光微调	Dimmer fine	13	13	13	13	0-→255	调光微调
水平	Pan	14	14	14	14	0-→255	水平粗调
水平微调	Pan fine	15	15	15	15	0-→255	水平微调
垂直	Tilt	16	16	16	16	0-→255	垂直粗调
垂直微调	Tilt fine	17	17	17	17	0-→255	垂直微调
功能控制	Function	18	18	18	18	0-→255	预留
复位	Reset	19	19	19	19	0-→25	无功能
						26-→76	ZOOM 复位

						77-→127	Pan/Tilt 复位
						128-→255	所有复位
调焦	Zoom	20	20	20	20	0-→255	光斑角由小到大变化
透镜旋转	Lenses Rotation	21	21	21	21	0-→255	透镜旋转，速度由慢到快
形状选择	Shape Selection		22-→ 132	22-→ 169	22	0-→255	Std, RGB, RGBW 模式 对应单颗 LED 独立控制 Shape 模式对应形状选择 通道
形状速度	Shape Speed				23	0-→63	静态形状
						64-→158	速度由快到慢
						159-→160	停止
						161-→255	速度由慢到快
形状平滑	Shape Fade				24	0-→15	无淡入淡出功能
						16-→255	有淡入淡出功能和曲线选择
形状红色	Shape R				25	0-→255	形状红色调光
形状绿色	Shape G				26	0-→255	形状绿色调光
形状蓝色	Shape B				27	0-→255	形状蓝色调光
形状白色	Shape W				28	0-→255	形状白色调光
形状调光	Shape Dimmer				29	0-→255	形状总调光
背景调光	Background Dimmer				30	0-→255	背景总调光
形状过渡	Shape Transition				31	0-→4	过渡无延时
						5-→255	过渡延时 100ms-→4s
形状偏移	Shape Offset				32	0-→255	形状角度或密度调节
形状频闪	Shape Strobe				33	0-→3	CLOSED
						4-→103	脉冲频闪由慢到快， 1Hz-25Hz
						104-→107	OPEN
						108-→207	等均频闪由慢到快， 1Hz-25Hz
						208-→212	OPEN
						213-→251	随机频闪由慢到快
						252-→255	OPEN
背景频闪	Background Strobe				34	0-→3	CLOSED
						4-→103	脉冲频闪由慢到快， 1Hz-25Hz
						104-→107	OPEN
						108-→207	等均频闪由慢到快， 1Hz-25Hz
						208-→212	OPEN
						213-→251	随机频闪由慢到快

						252-→255	OPEN
背景选择	Background Select				35	0-→8	无功能
						9-→23	背景图形选择
						24-→254	无选择
						255	镜像使能打开